More about NIRO-S:
www.niro-s.de/en

Determine glove size

Measure correctly:
Take a tape measure to measure the length of the hand. The hand should be open, and the fingers should be stretched.
As shown in the graphic, place the tape measure on the ball of the hand and lay it to the fingertip of the longest finger.
Read the length and determine the appropriate glove size with the chart.

Glove size	6	7	8	9	10	11
Hand length (measured at the longest finger)	16 cm	17 cm	18 cm	19 cm	20 cm	21 cm

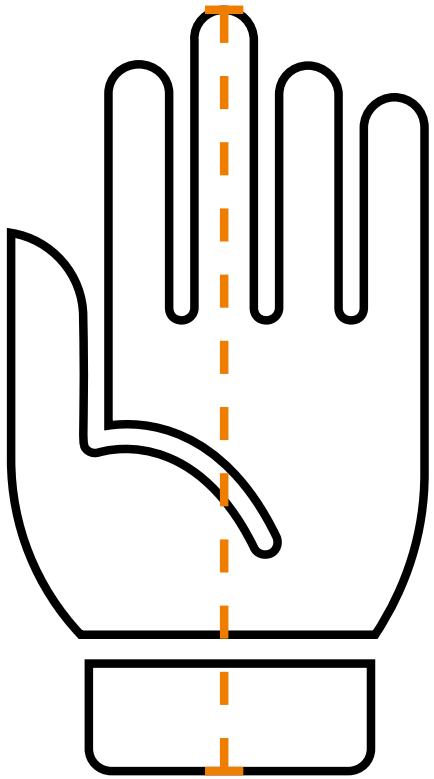

Friedrich Münch GmbH + Co KG
NIRO-S is a brand of Friedrich Münch GmbH + Co KG • In den Waldäckern 10 • 75417 Mühlacker
Telefon: +49 (0) 7041 9544-0 • Telefax: +49 (0) 7041 9544-55 • E-Mail: info@niro-s.de • www.niro-s.de